

74-250 Quick Start Instructions:

1. Remove the battery compartment cover by unhooking the latch and sliding the cover down off the radio. Place 2 AA alkaline batteries (not supplied) into the battery compartment on the backside of the radio. Replace battery cover.
2. The radio has 7 weather channels in which you can listen to the weather radio broadcast on. To initially hear the broadcast for your area and surrounding areas, do the following:
 - Press and release the "**FUNC / SNOOZE**" button once to enter the weather mode. "**NO MESSAGE**" will be scrolling across the LCD.
 - Press and hold "**SET**" until the 6-digit current county code shows on the display. The first time you enter this mode the code will be displayed as 999999.
 - Press "**SET**" seven times.
 - This will take you past the county code.
 - The number next to **CH** will flash
 - Press UP/Down button to change to the desired channel 1 to 7. Stop on the channel when you hear the weather broadcast.
 - Press "**SET**" once to end programming.
 - When no buttons have been pressed for 10 seconds, the current setting is confirmed.
 - Now, the radio is programmed for the correct weather channel for your county and surrounding counties.
 -
3. To listen to the weather radio broadcast at anytime, press and hold the "**FUNC / SNOOZE**" button for 5 seconds. You will see the NOAA indicator on the LCD and you will hear the broadcast.

Note: Ensure the volume is turned up to an audible level.

Weather Channel Frequencies:

Channel	Frequency (MHz)
1	162.400
2	162.425
3	162.450
4	162.475
5	162.500
6	162.525
7	162.550

You are now able to receive weather alerts for your area and surrounding areas. To narrow the alerts to just your county, see page 6 to program the S.A.M.E. code for your county into the radio.

To get the S.A.M.E. code for your area, call 1-888-697-7263 or go to www.nws.noaa.gov/nwr/indexnw.htm