

Quick Start Instructions

1. Place 3 AA alkaline batteries or the optional battery pack into the battery compartment on the backside of the radio. These are the primary source of power when you use the radio on the go. The LCD will display 12:00 AM.
2. Plug in the AC Adapter into the side jack on the radio labeled DC 9V. This is an optional power source when using the radio at home. If you have the HH54VP2 with the included desktop charger, plug the AC adapter into the desktop charger. Please note both chargers will not charge standard rechargeable AA batteries. However, it the optional battery pack included with HH54VP2 only.
3. Press the ON/OFF button for 3 seconds to turn the unit on into standby mode and program the settings.
4. Program the weather channel for your area:
 - a. Press the MENU button once.
 - b. Press the DOWN arrow until CHANNEL is displayed on the LCD.
 - c. Press the SELECT button.
 - d. Press the DOWN arrow until you hear the broadcast of your station.
 - e. Press the SELECT button to save your station and exit back to Menu mode.
 - f. Press the MENU button to exit back to standby mode.
1. Press the WX/SNOOZE button to listen to the weather broadcast. Use the UP/DOWN arrows on the side of the radio to adjust the volume to a desired listening level. To exit the weather broadcast mode press the WX/SNOOZE button again. Note: When in weather mode and the volume is adjusted and volume is displayed you must press the WX/ SNOOZE button twice to exit back to standby mode. You are now able to receive weather alerts for your area and surrounding areas. To narrow the alerts to just your county, see page 4 to program the S.A.M.E code for your county and/or surrounding counties