



FRS AND GMRS PORTABLE TWO-WAY RADIO PRODUCT COMPARISON GUIDE

MODEL	T20	T10	LXT118	LXT118VP	T31VP	LXT500VP3	†T35VP	T51VP3	†LXT535VP3	LXT560VP3	†T55VP3	T61VP3	LXT600VP3	LXT630VP3	†T65VP3	T71VP3	†T75VP3	T77VP5	T290VP4	†T295VP4	GXT1000VP4	GXT1030VP4	†GXT1050VP4
Range	16	20	18	18	26	24	26	28	24	26	28	32	30	30	32	38	38	38	40	40	36	36	36
Channels	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22
Extra Channels										14		14	14	14	14	14	14	14	14	14	28	28	28
Privacy Codes	38	38			38		38	38		121	38	121	121	121	121	121	121	121	121	121	142	142	142
Channel Scan	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Vox	1	1	1	1	1	1	1	3	1	3	3	9	3	3	9	9	9	9	9	9	9	9	9
Monitor	•	•			•		•	•		•	•	•	•	•	•	•	•	•	•	•	•	•	•
Weather Scan										•		•	•	•	•	•	•	•	•	•	•	•	•
Weather Alert	•	•			•		•	•		•	•	•	•	•	•	•	•	•	•	•	•	•	•
Call Alert	1	1	1	1	1	1	1	1	1	5	1	5	5	5	5	5	5	5	•	•	10	10	10
Animal Call Alert															5		5			5			5
Roger Beep	•	•			•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Auto Squelch	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Water Resistant	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Keypad Lock	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Keystroke Tones	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
SOS Siren																					•	•	•
Headphone Jack			•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
TX Power Levels	1	1	1	1	1	2	1	1	2	2	1	2	2	2	2	2	2	2	•	•	3	3	3
Silent Operation	•	•			•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Whisper Mode																					•	•	•
Vibrate Alert															•		•			•	•	•	•
Backlight Display (LCD)										•		•	•	•	•	•	•	•	•	•	•	•	•
Battery Life Extender	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Battery Meter	•	•			•		•	•		•	•	•	•	•	•	•	•	•	•	•	•	•	•
Low Battery Indication	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Micro USB Charge					•		•	•		•	•	•		•	•	•	•	•	•	•			
AC Adapter Charge				•		•			•	•		•	•	•	•	•	•	•	•	•	•	•	•
DC Adapter Charge																					•	•	•
Rechargeable Batteries				•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Battery Type	4AAA	3AAA	3AAA	3AAA	3AAA	4AAA	3AAA	3AAA	4AAA	4AAA	3AAA	3AAA	3AAA	3AAA	3AAA	3AA	3AA	3AA	No	No	4AA	4AA	4AA
Drop-in Charger					•		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Charge Time (hours)				12	12	12	12	12	12	12	12	3-4	12	12	3-4	3-4	3-4	3-4	12	12	12	12	12
USB Cable				•			•	•			•	•			•	•	•	•	•	•			
Pair of Headsets																		•	•	•	•	•	•

† Camo Pattern