



PORTABLE TWO-WAY RADIOS

PRODUCT COMPARISON GUIDE

MODEL	T10	LXT118	LXT118VP	T31VP	LXT500VP3	T51VP3	LXT560VP3	†T55VP3	†LXT535VP3	T61VP3	LXT600VP3	†T65VP3	T71VP3	GXT860VP4	†T75VP3	T77VP5	GXT1000VP4	†GXT1050VP4
Range	20	18	18	26	24	28	26	28	24	32	30	32	38	36	38	38	36	36
Channels	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22
Extra Channels							14			14	14	14	14	20	14	14	28	28
Privacy Codes	38			38		38	121	38		121	121	121	121	142	121	121	142	142
Channel Scan	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Vox	1	1	1	1	1	3	3	3	1	9	3	9	9	5	9	9	9	9
Monitor	•			•		•	•	•		•	•	•	•	•	•	•	•	•
Weather Scan							•			•	•	•	•	•	•	•	•	•
Weather Alert	•			•		•	•	•		•	•	•	•	•	•	•	•	•
Call Alert	1	1	1	1	1	1	5	1	1	5	5	5	5	10	5	5	10	10
Animal Call Alert															5			5
Roger Beep	•			•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Auto Squelch	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Water Resistant	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Keypad Lock	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Keystroke Tones	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
SOS Siren																	•	•
Headphone Jack		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
TX Power Levels	1	1	1	1	2	1	2	1	2	2	2	2	2	3	2	2	3	3
Silent Operation	•			•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Whisper Mode																	•	•
Vibrate Alert												•		•	•		•	•
Backlight Display (LCD)							•			•	•	•	•	•	•	•	•	•
Battery Life Extender	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Battery Meter	•			•		•	•	•	•	•	•	•	•	•	•	•	•	•
Low Battery Indication	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Micro USB Charge				•		•		•		•		•	•		•	•		•
AC Adapter Charge			•		•		•		•		•		•	•	•	•	•	•
DC Adapter Charge																•	•	•
Rechargeable Batteries			•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Battery Type	3AAA	3AAA	3AAA	3AAA	4AAA	3AAA	4AAA	3AAA	4AAA	3AAA	3AAA	3AAA	3AA	4AA	3AA	3AA	4AA	4AA
Drop-in Charger				•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Charge Time (hours)			12	12	12	12	12	12	12	3-4	12	3-4	3-4	12	3-4	3-4	12	12
USB Cable				•		•		•		•		•	•		•	•		•
Pair of Headsets																•	•	•

† Camo Pattern